



Unit:mm

FST-R Zero point on the left



FST-L Zero point on the right

ساسل ا	րուրո	ղողո	որուր	պոոդո	արուր	պոոդո	արողո	որոդո	պապա	Ē
100 9	0	80	70	60	50	40	30	20	10	0
անանանանանանանանանանանանանանան										

FST-C Center distribution

سب	րողոո	րողոո	րողոո	րողոո	mini	ղուղու	րուրու	րուրու	րոդոո	ر است
50	40	30	20	10	0	10	20	30	40	50
Thickness:										

- Multiples of 0 and 50 are red.
- Material/Finish

 Material/Finish 	🖗 RoHS
	FST
Main body	Polyester (transparent)



- Sticker type horizontal scale. Use by sticking to machinery and equipment.
- Standardized 100/200/300 mm scale length.
- Made of flexible polyester. Can be stuck to the curved surfaces of posts or shafts, plus can be cut to a desired length for use.
- Corners are rounded. Doesn't come off easily.
- There are 3 types of scales. They can be selected by the symbol of the part number.

Symbol	Scale
R	Zero point on the left
L	Zero point on the right
С	Center distribution

A Precautions for Use

- **FST** Use the scale of the Scale Sticker as a general guideline.
- Thoroughly remove oil and dust on the sticking surface before sticking.

			Office
Part Number 📶	L1	L	Mass (g)
FST-100-R	100	108	0.5
FST-200-R	200	208	1
FST-300-R	300	308	1.5
FST-100-L	100	108	0.5
FST-200-L	200	208	1
FST-300-L	300	308	1.5
FST-100-C	100	108	0.5
FST-200-C	200	208	1
FST-300-C	300	308	1.5

Related Products

Point Lens FLE, which is useful to read the scale, is available.



m Scale Plate / Scale sticker Length Adjusutment → P.xxxx

• Part number specification



NBK